


# THE AUSTIN 'CHAMP' LUBRICATION CHART

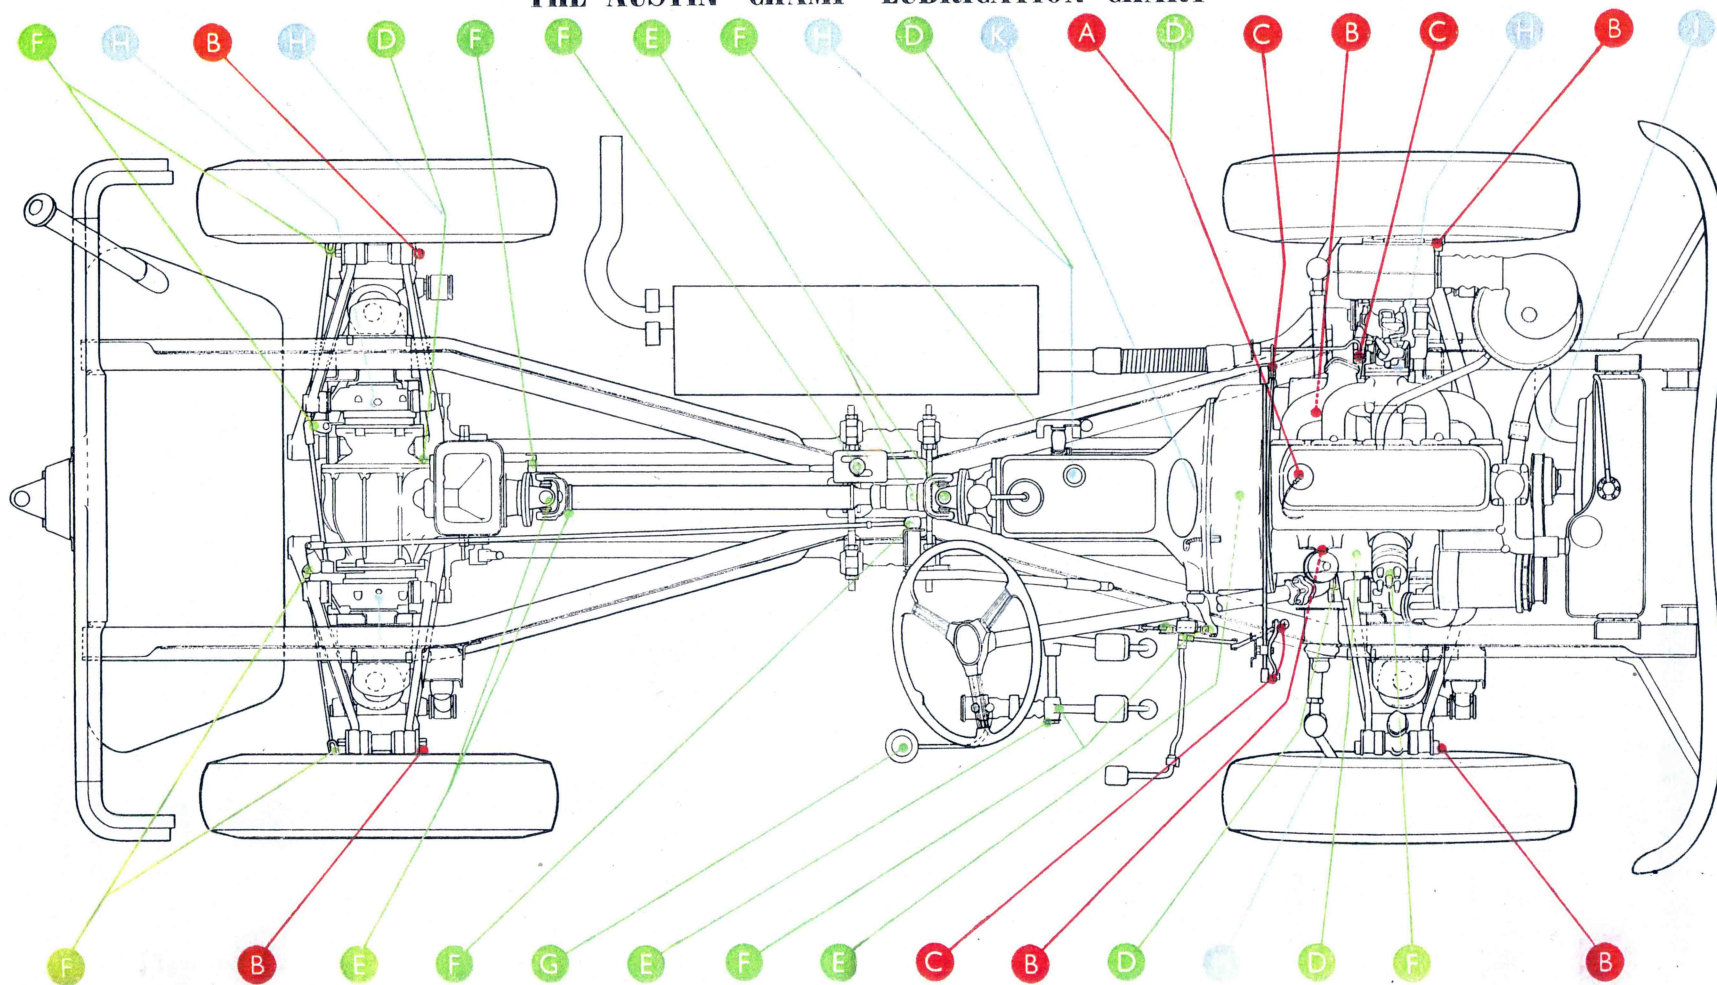

CH. 43. A.

WEEKLY (500 MILES)			MONTHLY (2,000 MILES)			3 MONTHLY (6,000 MILES)		
OIL	A	Check the Engine Sump oil level and top-up if necessary (Daily).	OIL	D	Drain and refill the Engine Sump. Top-up the Gearbox, Front and Rear Axles and Steering Box.	OIL	H	Drain and refill the Gearbox and Front and Rear Axles. Top-up the Suspension Pivots.
OIL GUN	B	Steering Connections (2). Front and Rear Suspension Spindles and Swivel Pins (8).	OIL GUN	E	Propeller Shaft Universal Joints and Sliding Splines (6). Clutch and Brake Pedals.	OIL GUN	J	Water Pump.
OIL CAN	C	Carburettor Control Linkage Joints.	OIL CAN	F	Handbrake, Pedal, Forward-Reverse and Four-Wheel Drive Control Linkage Joints. Distributor.	OIL CAN	K	Clutch Withdrawal Race.
			EXAMINE	G	Brake Tank Fluid Level.	GREASE	L	Dynamo with high melting point grease (10,000 miles).

Figures in brackets denote the number of nipples requiring attention.

